


FIRE PROTECTION VALVE CONTROL MOUNTING DETAIL AT BENT 6


(LOOKING BACKSTATION)
SCALE: 1 1/2" = 1'-0"

MOUNT CABINET 10" (MIN) FROM FIRE DEPT. CONNECTION

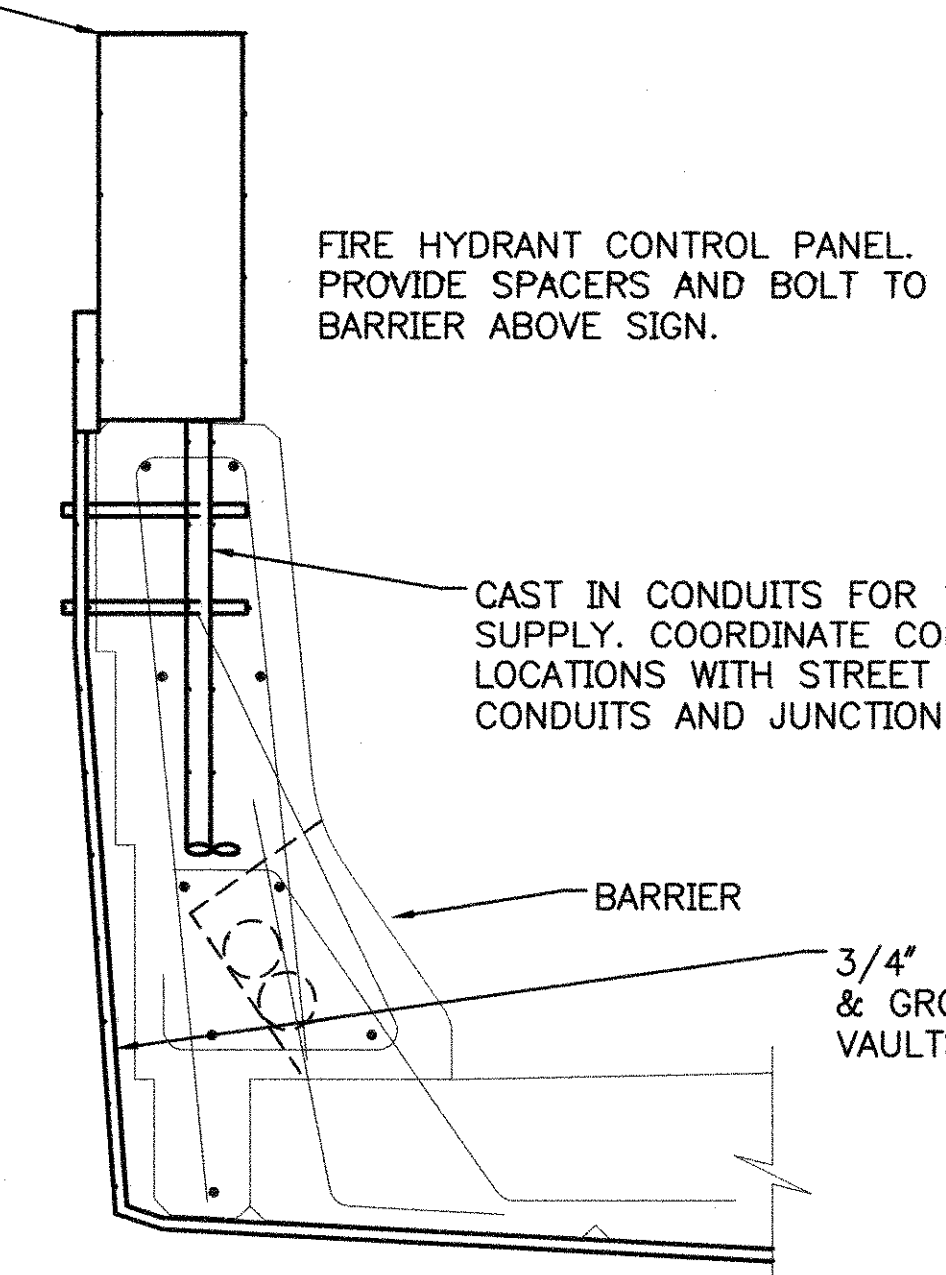

FIRE PROTECTION VALVE CONTROL MOUNTING DETAIL AT BENT 13


(LOOKING BACKSTATION)
SCALE: 1 1/2" = 1'-0"

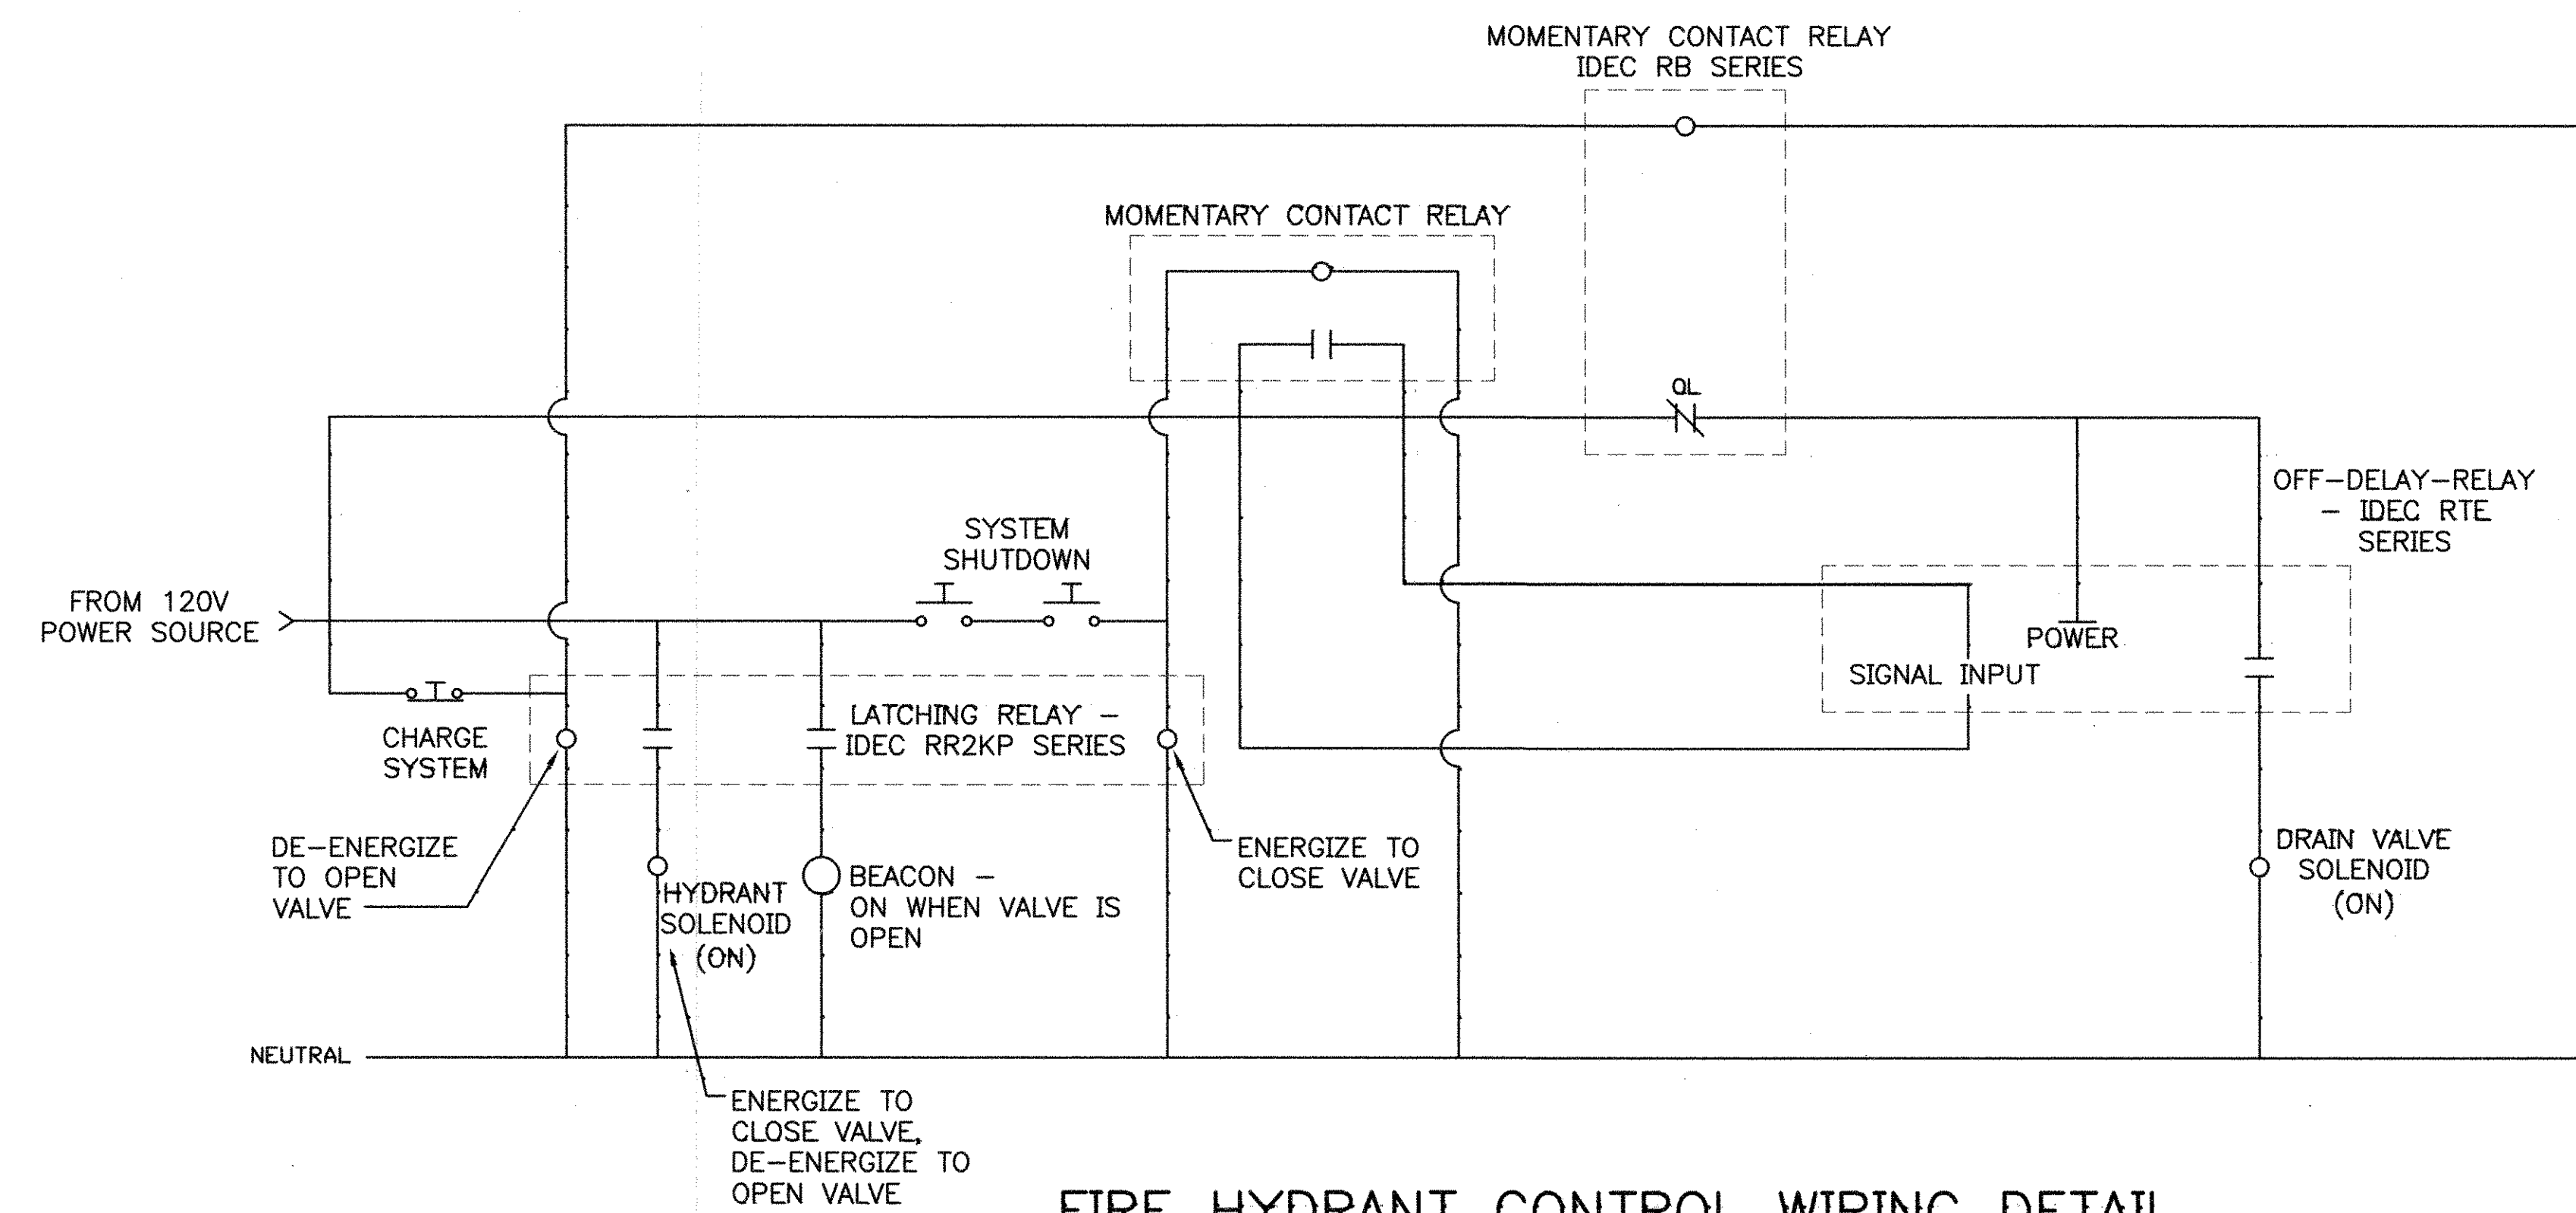

FIRE HYDRANT CONTROL WIRING DETAIL

NOT TO SCALE

OTHER RELAY MANUFACTURERS ALLEN-BRADLEY OR POTTER-BRUMFIELD OR EQUAL

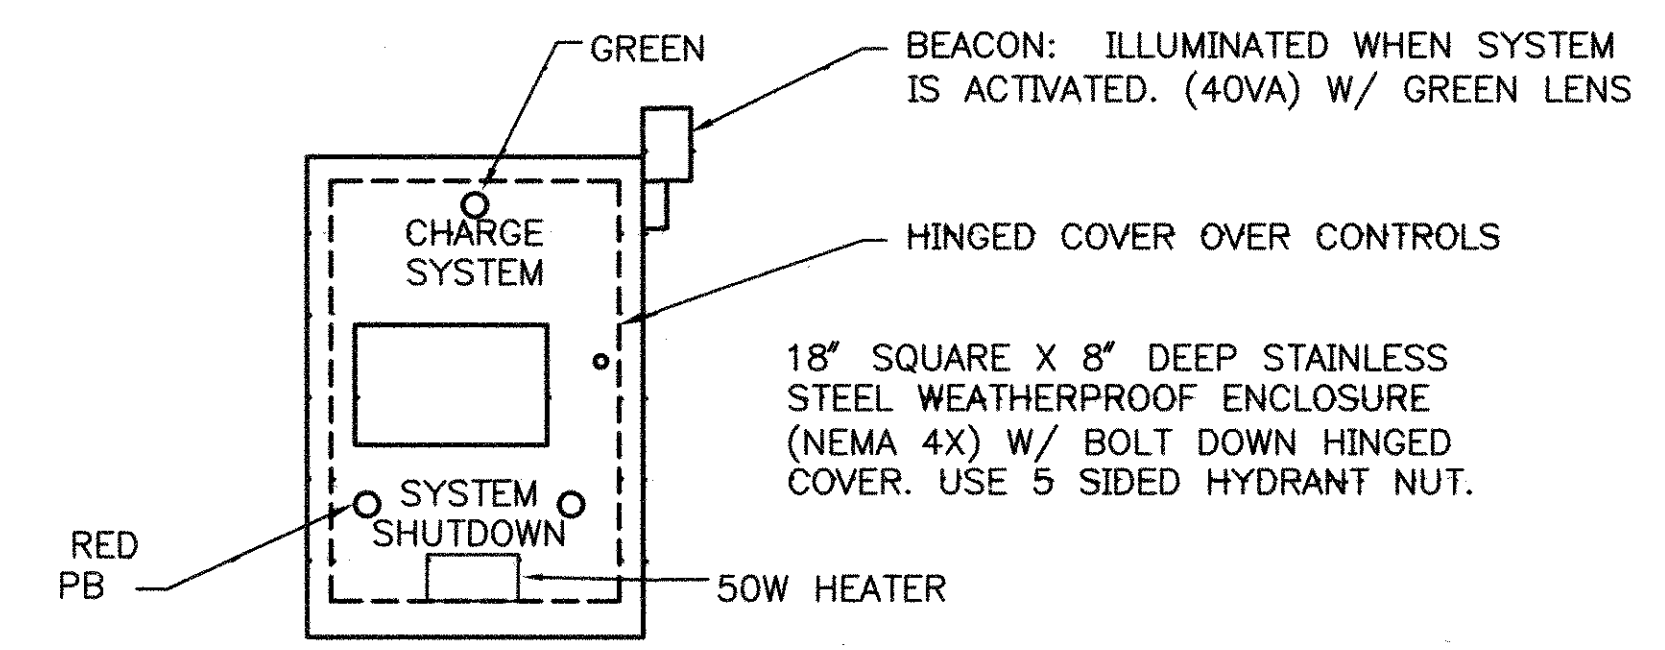

PROVIDE ENGRAVED PHENOLIC NAMEPLATE - INSIDE OF DOOR, READING:

1. TO ACTIVATE FIRE CONTROL SYSTEM PUSH TOP BUTTON "CHARGE SYSTEM".
2. TO CLOSE AND DRAIN SYSTEM PUSH TWO LOWER BUTTONS SIMULTANEOUSLY.
3. TO REACTIVATE SYSTEM PUSH TOP BUTTON. SYSTEM WILL RESET AND CHARGE.

FRONT ELEVATION CONTROL PANEL DETAILS

FP10